

Glass shelf support.

In accordance with the regulation UNI EN 14749/05.


Zinc alloy
Engineering plastic




ASSEMBLING

1

ASSEMBLING WITH SCREW FIXING

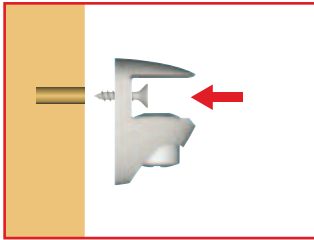


ASSEMBLING WITH SMOOTH PIN

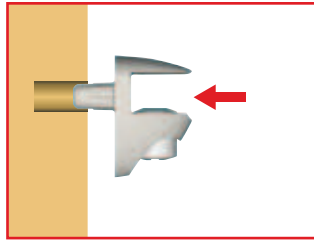


2

SLIDE THE GLASS HORIZONTALLY INTO THE COBRA "U" SOCKET BEFORE ASSEMBLING THE DOOR

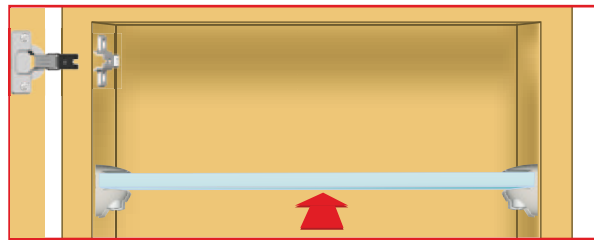



3

SECURE THE GLASS IN POSITION BY SCREWING CLOCKWISE THE NYLON LOCKING INSERT UNTIL THE GLASS IS SAFELY LOCKED AND ASSEMBLY THE DOOR.

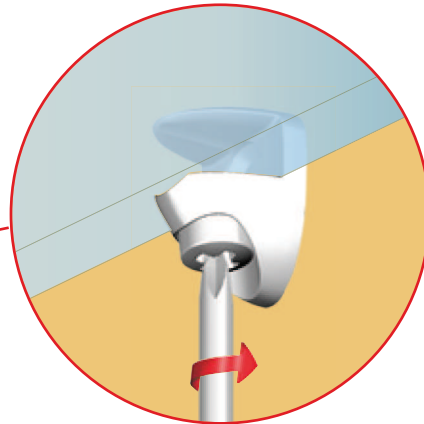

SHELF ASSEMBLING AND REPOSITIONING

SHELF REMOVAL
REMOVE THE DOOR FIRST AND UNSCREW THE NYLON LOCKING INSERT ANTICLOCKWISE UNTIL YOU CAN EASE THE GLASS OUT.

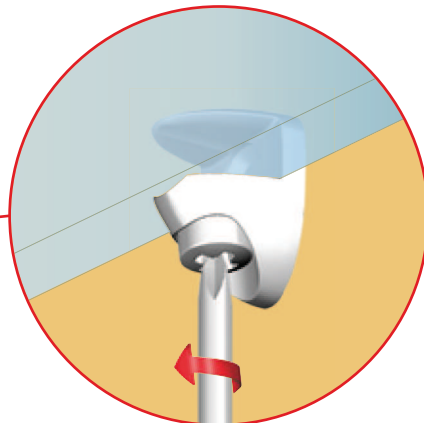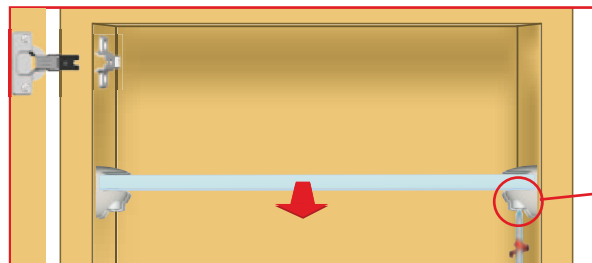

SHELF REPOSITIONING
TO REPOSITION THE SHELF REPEAT OPERATIONS AS SHOWN IN PCS. 2-3.

